

## (wafer1,0,0,-1,-1,4,4) Plots and Summary

- Cell Size = 10um
- Number of Times Accessed = 12
- Last Stimulated = 2022/March/01 at 02:32:26PM

-----  
Stimulated at 02:14:55PM on 2022/March/01

Activity = form

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s


Compliance Current = 20.0uA

Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Form at 3.5 V

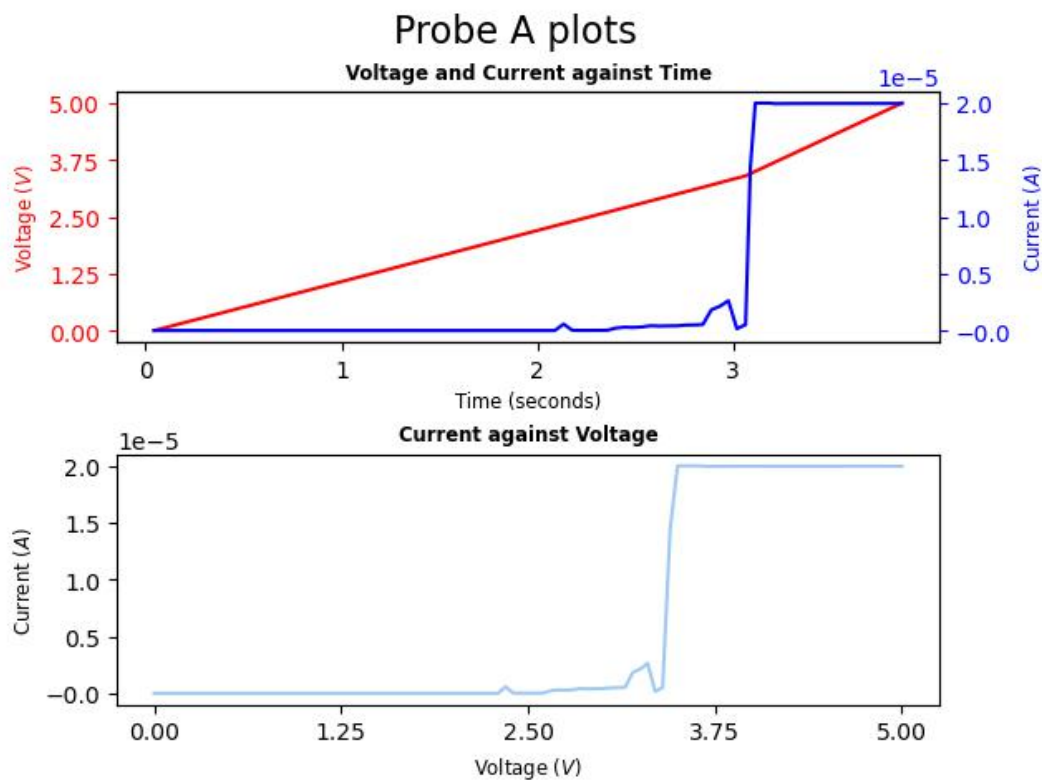

## Probe B plots

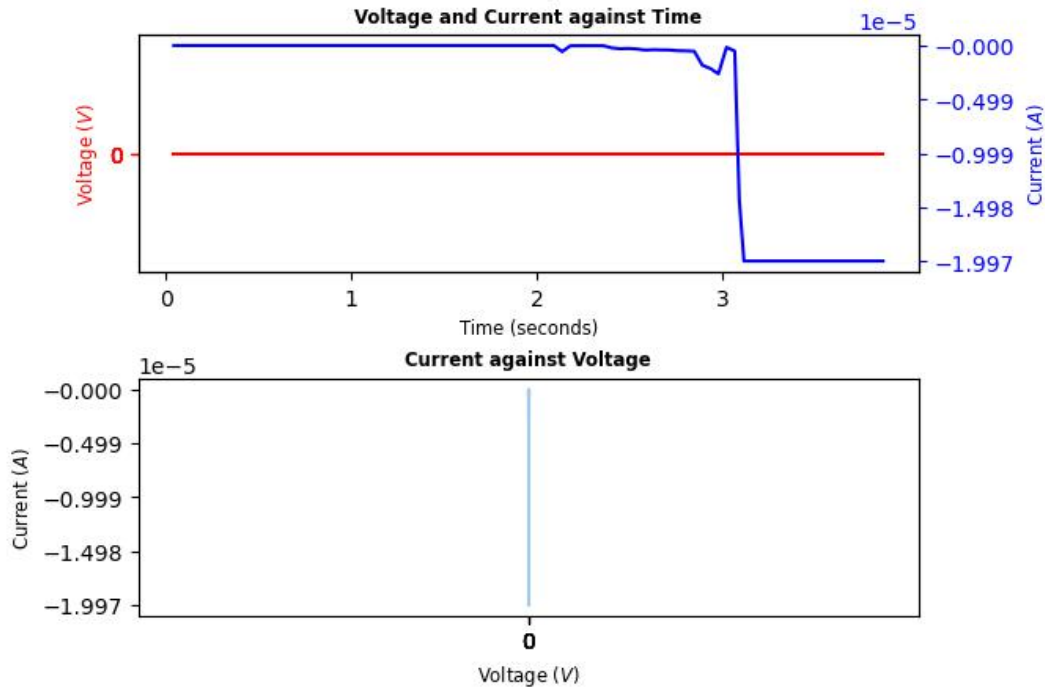

-----  
Stimulated at 02:18:15PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -5V

Ramp Rate = 1V/s

Compliance Current = 8.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Reset at -1.45 V

## Probe A plots

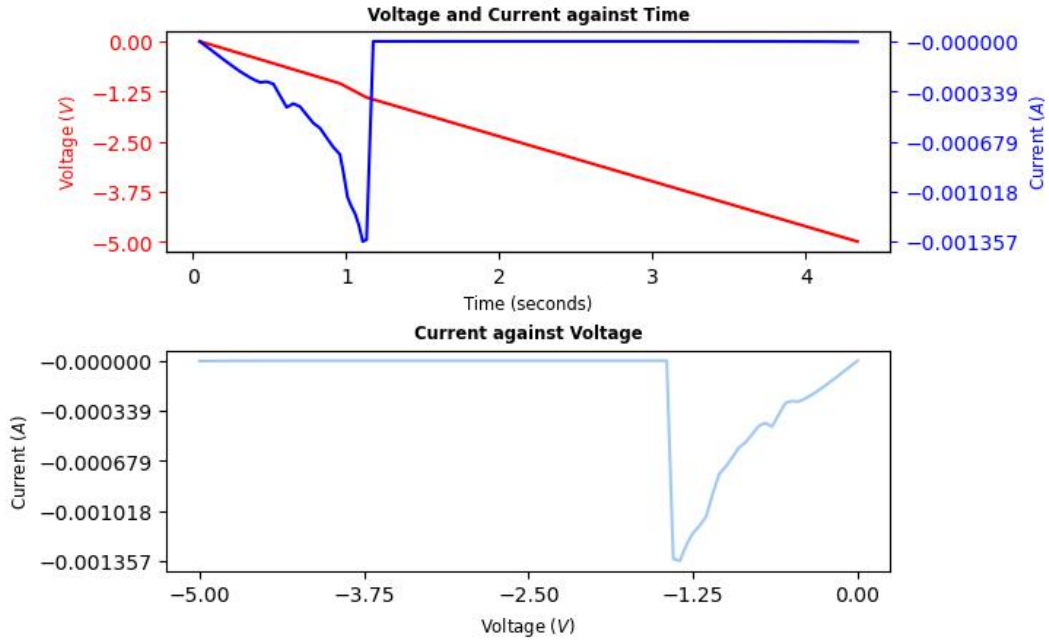

## Probe B plots

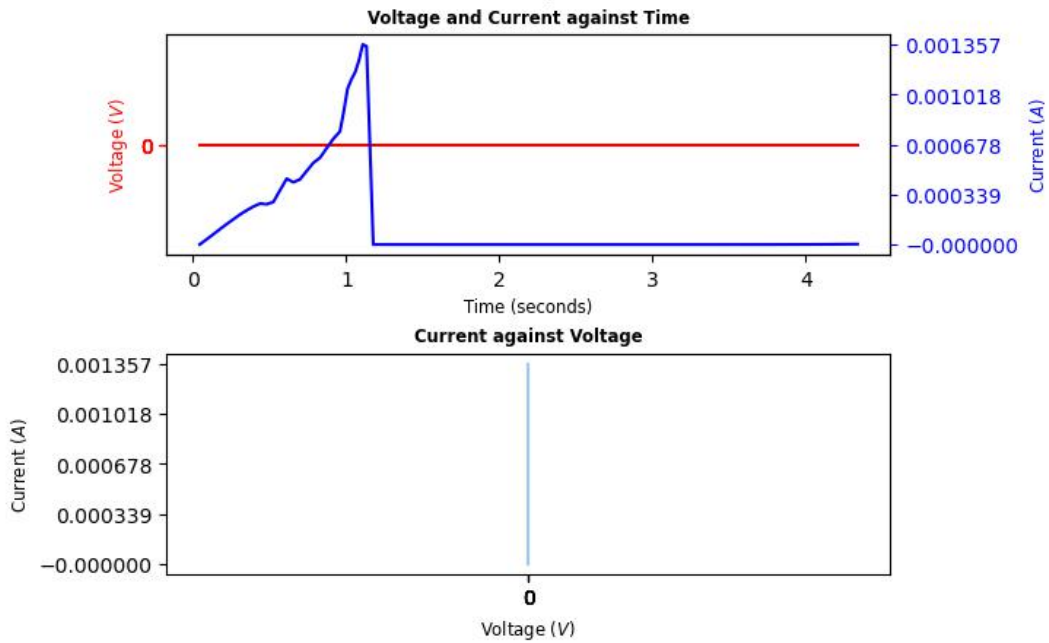

-----  
Stimulated at 02:20:48PM on 2022/March/01

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Set at 2.65 V

## Probe A plots

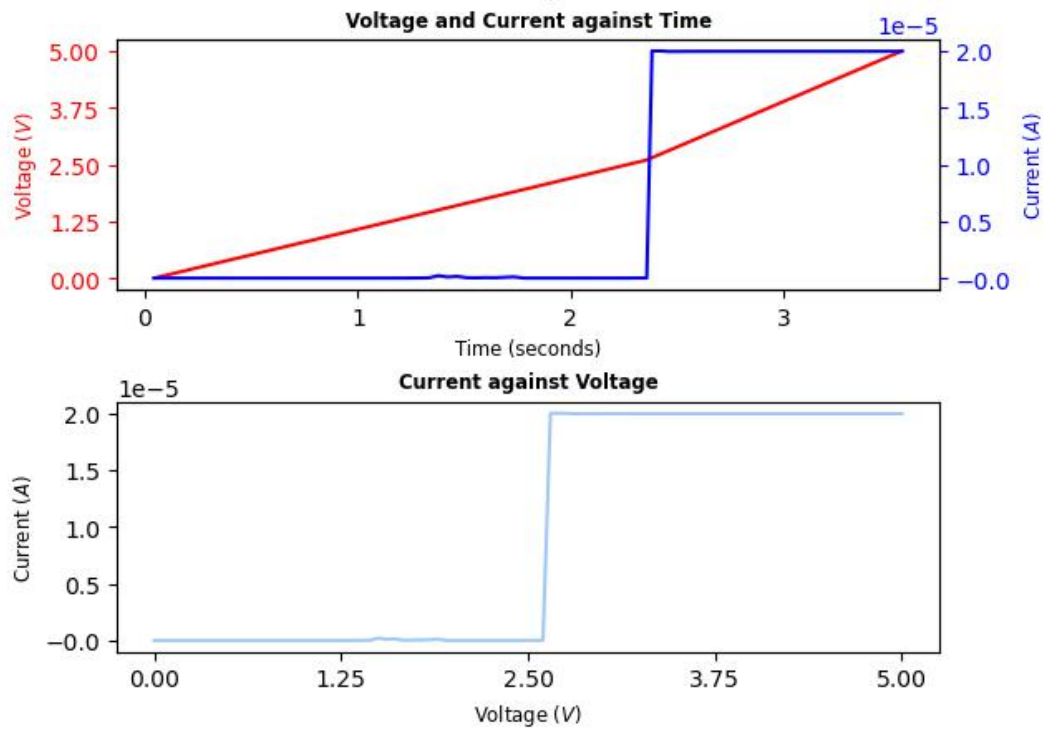

## Probe B plots

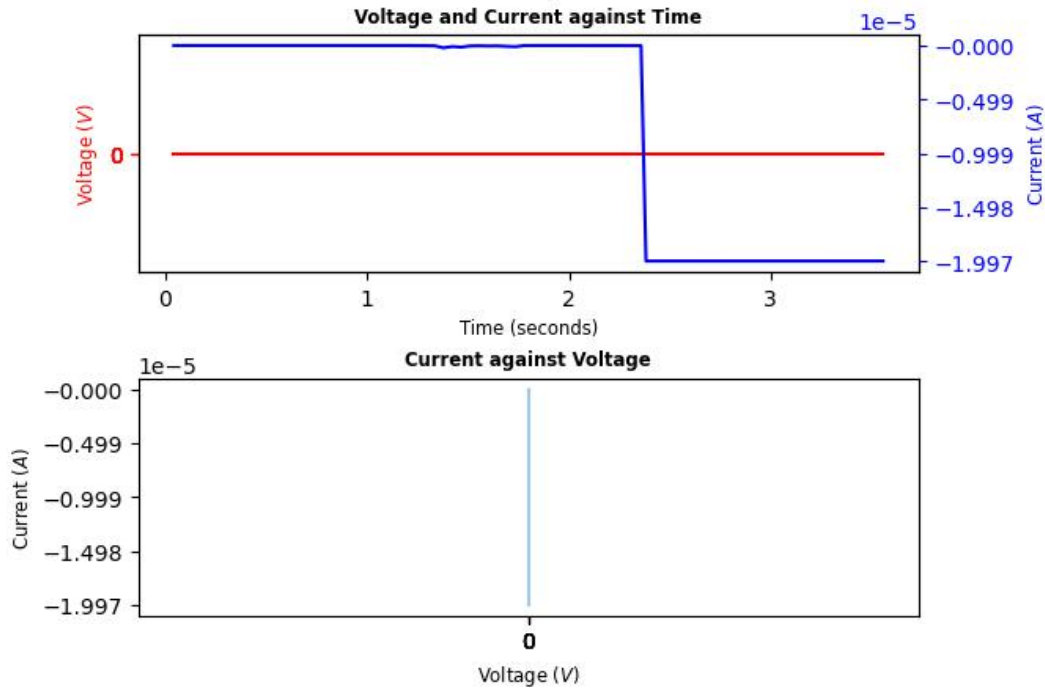

-----  
Stimulated at 02:22:14PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Reset at -1.7 V

## Probe A plots

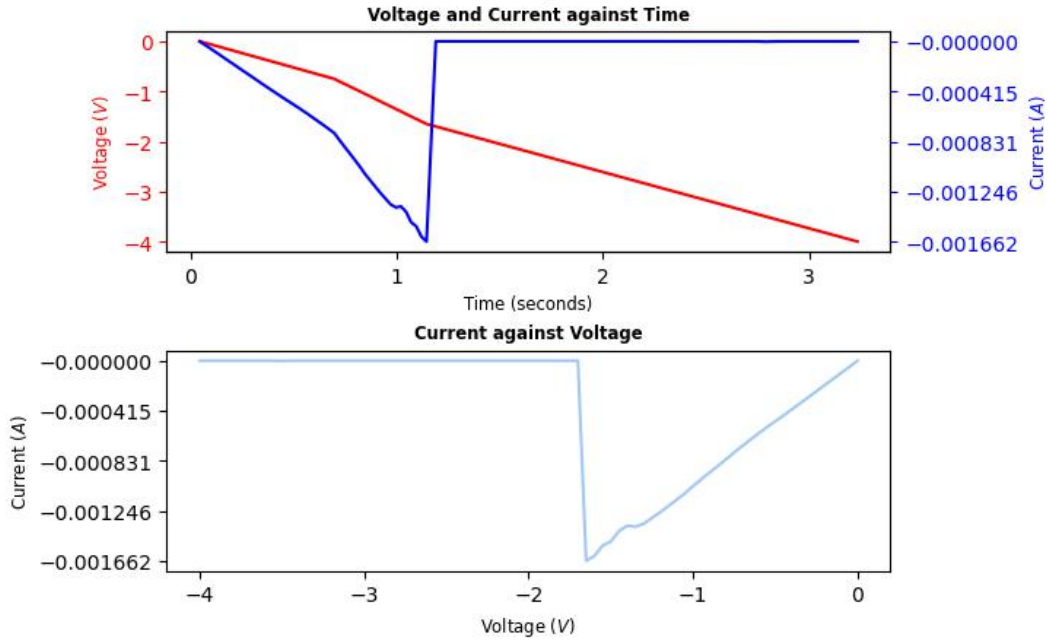

## Probe B plots

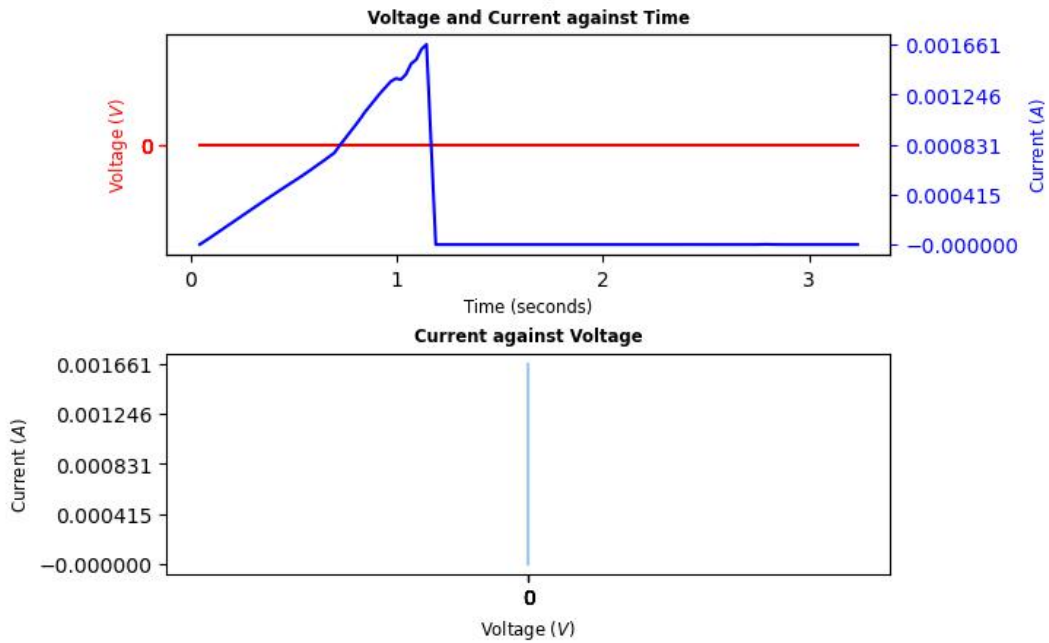

-----  
Stimulated at 02:23:51PM on 2022/March/01

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Set at 4.3 V

## Probe A plots

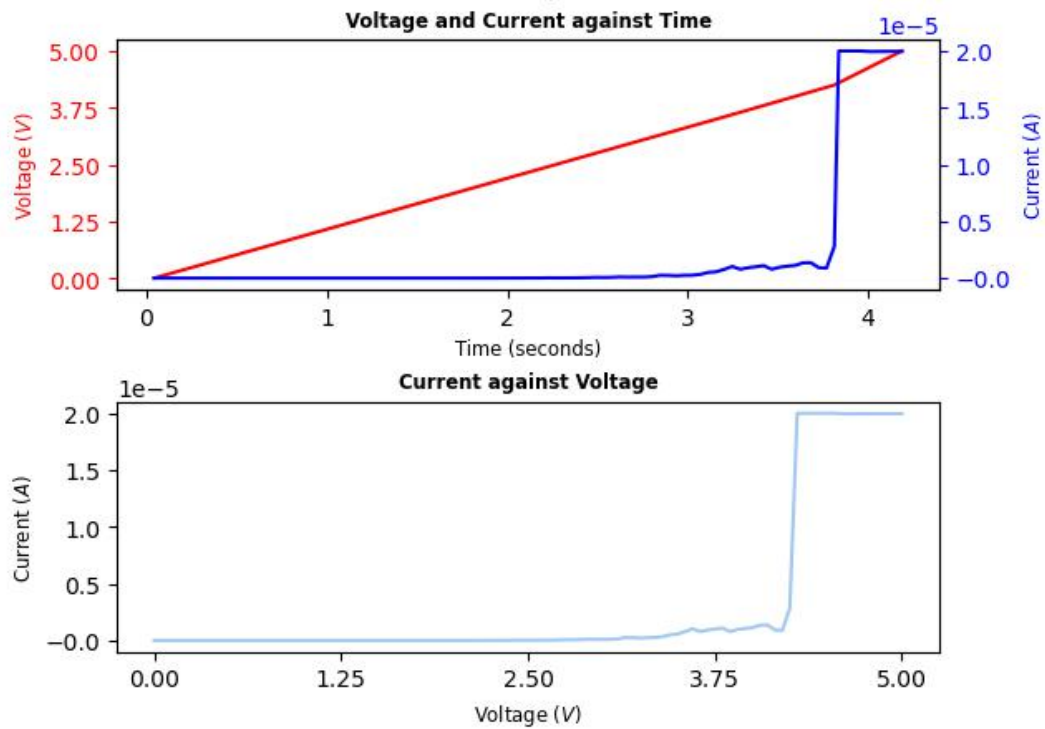

## Probe B plots

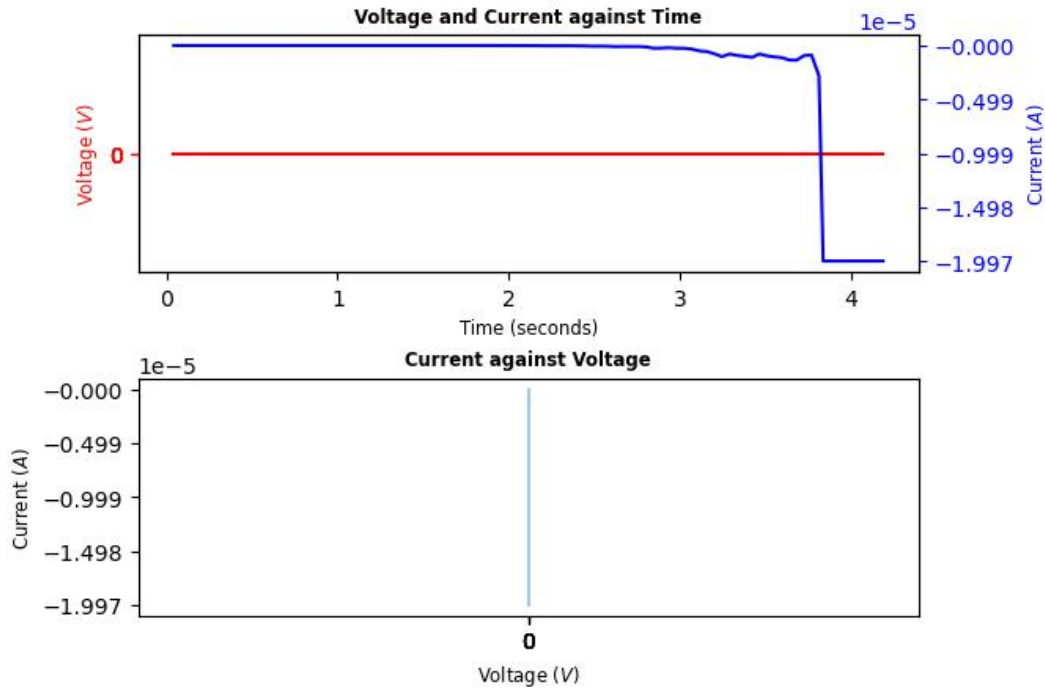

-----  
Stimulated at 02:25:36PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA

Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>


Comments = Reset at -3.55 V



## Probe A plots

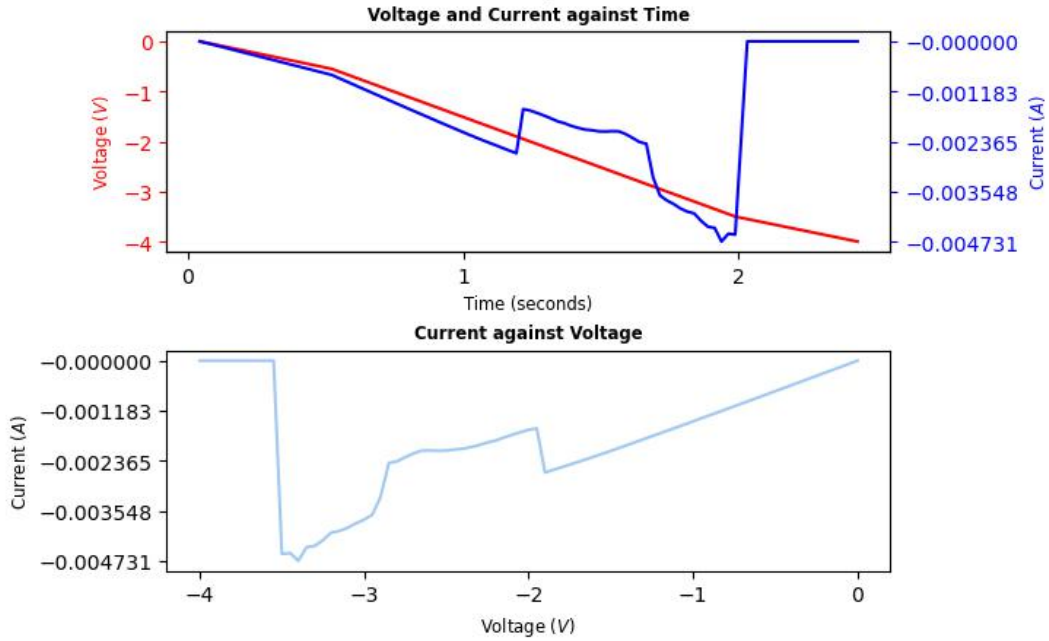

## Probe B plots

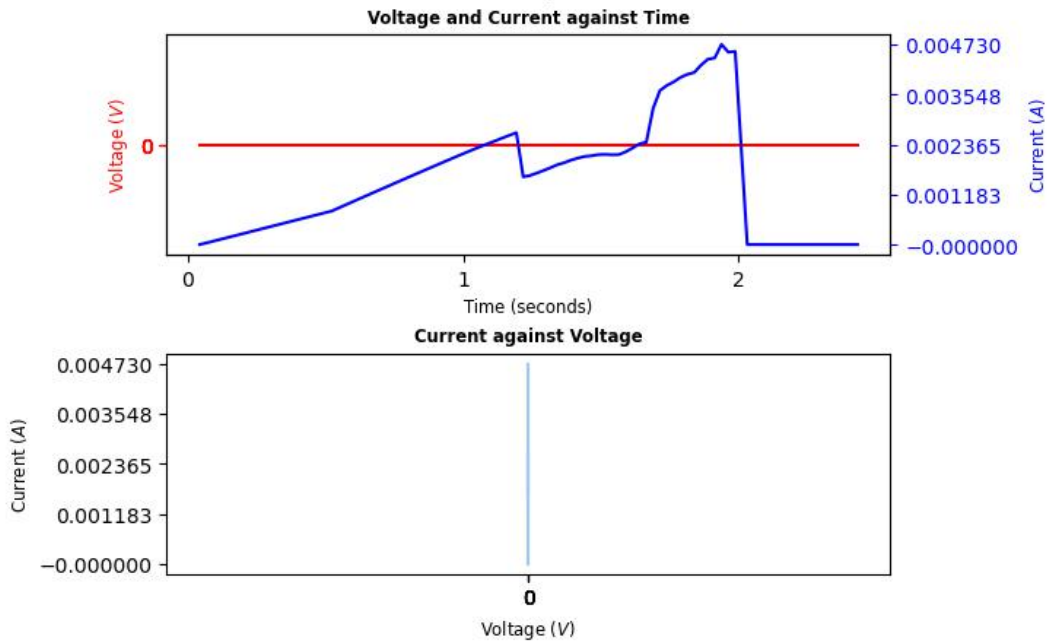

-----  
Stimulated at 02:28:59PM on 2022/March/01

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Set at 3.45 V

## Probe A plots

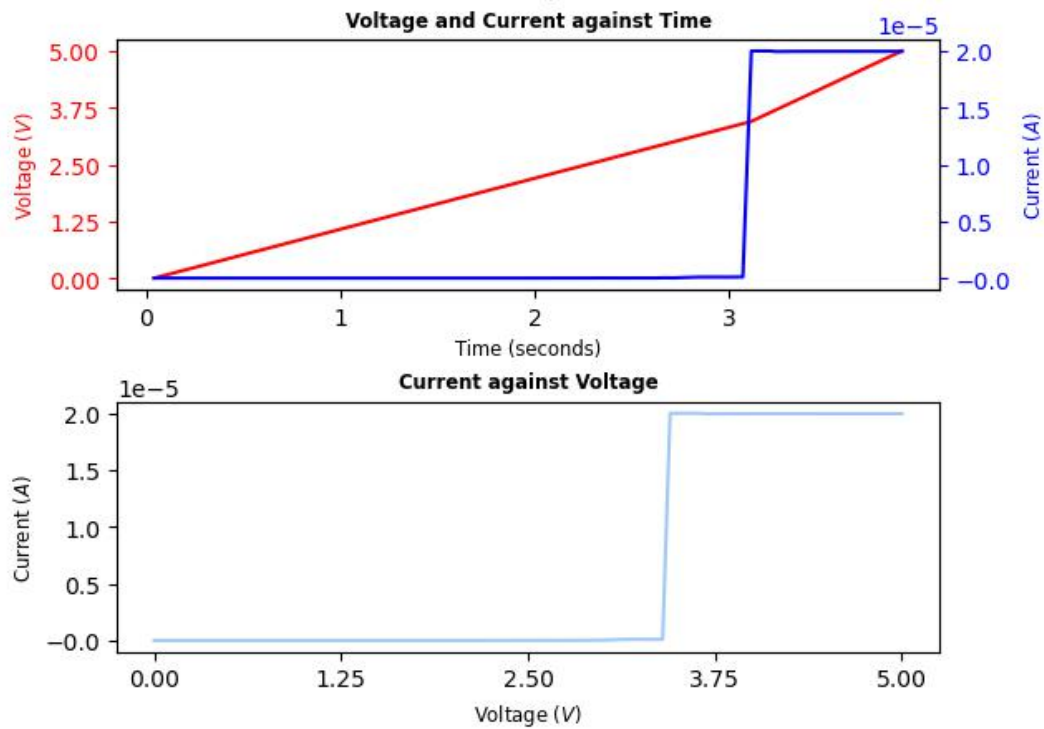

## Probe B plots

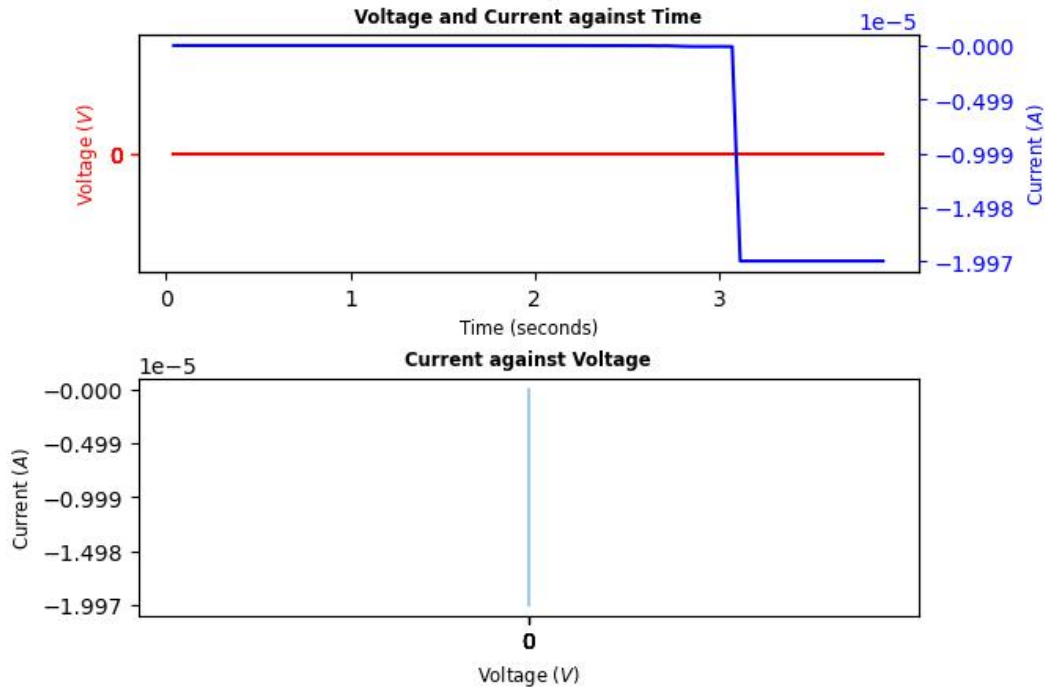

-----  
Stimulated at 02:29:50PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Failed reset

## Probe A plots

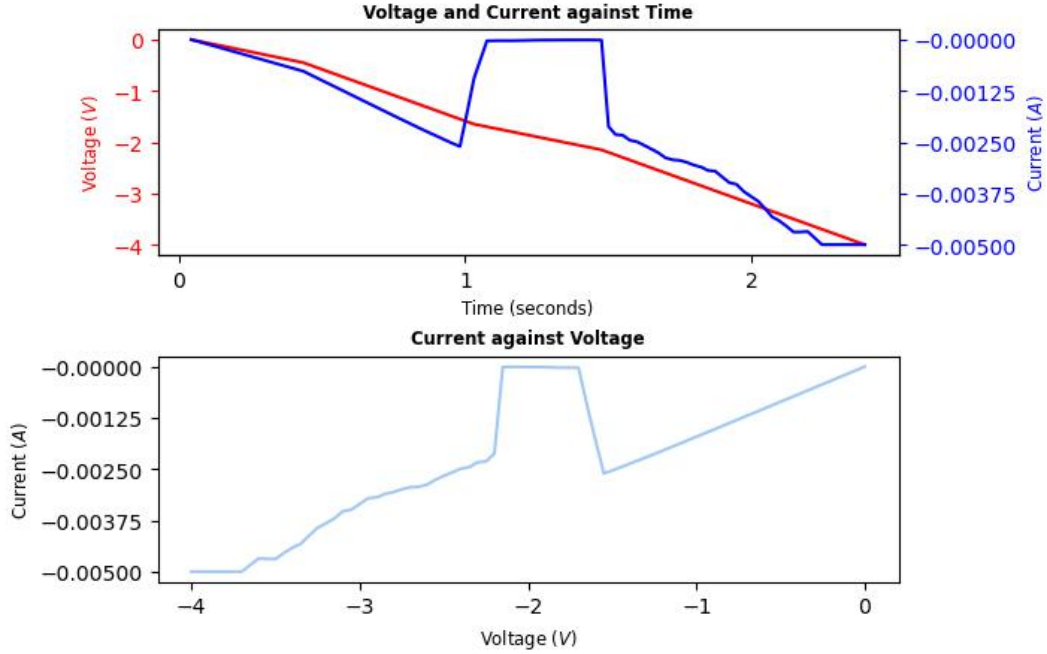

## Probe B plots

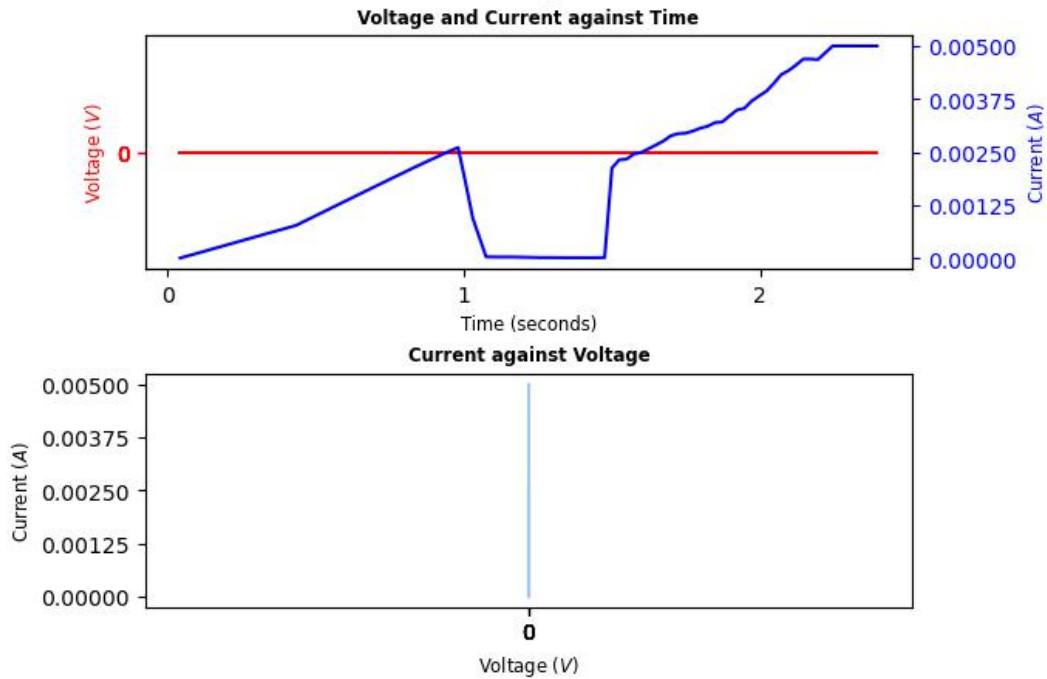

-----  
Stimulated at 02:30:45PM on 2022/March/01

Activity = observe

Start Voltage = <2 probe observe activity, so invalid>

End Voltage = <2 probe observe activity, so invalid>

Ramp Rate = <2 probe observe activity, so invalid>


Compliance Current = 20.0uA

Platinum Voltage = 0V


Copper Voltage = 0.1V

Run Folder Name = <2 probe, so invalid>

Comments = State: SET

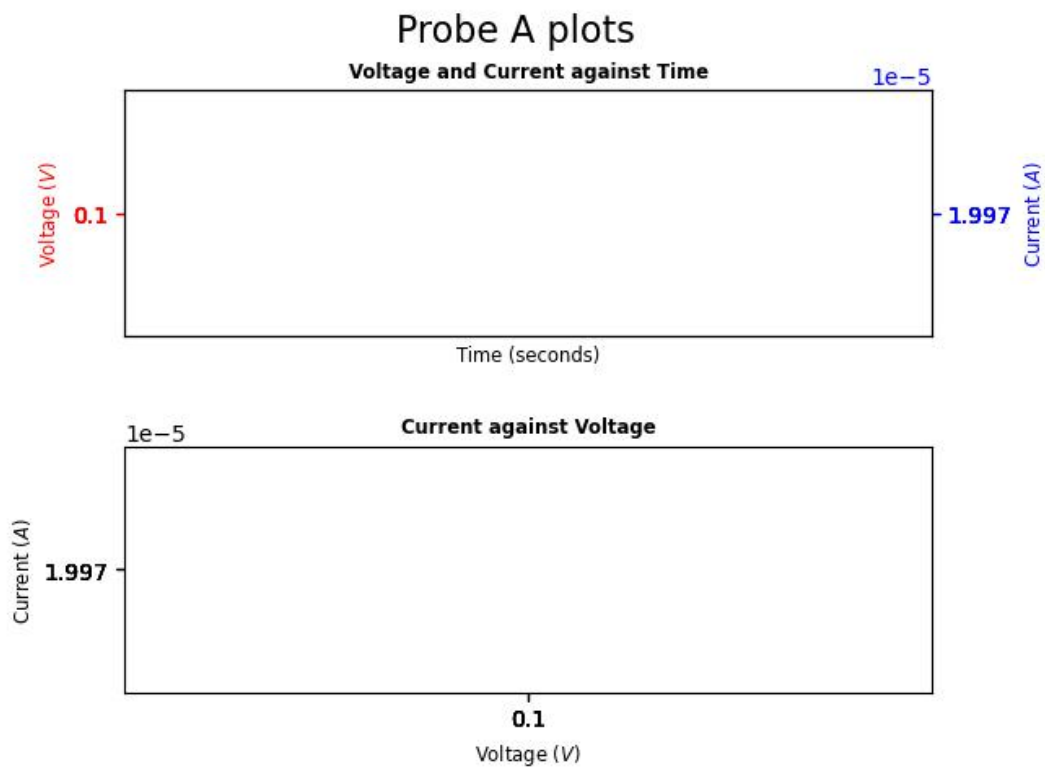

## Probe B plots

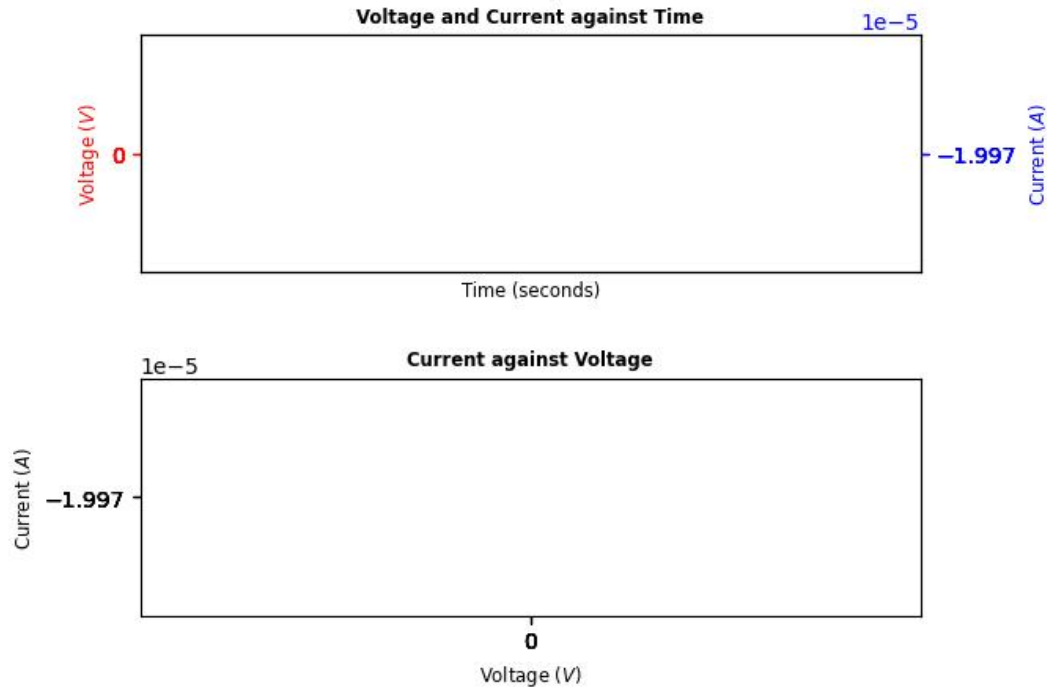

-----  
Stimulated at 02:31:27PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Failed reset

## Probe A plots

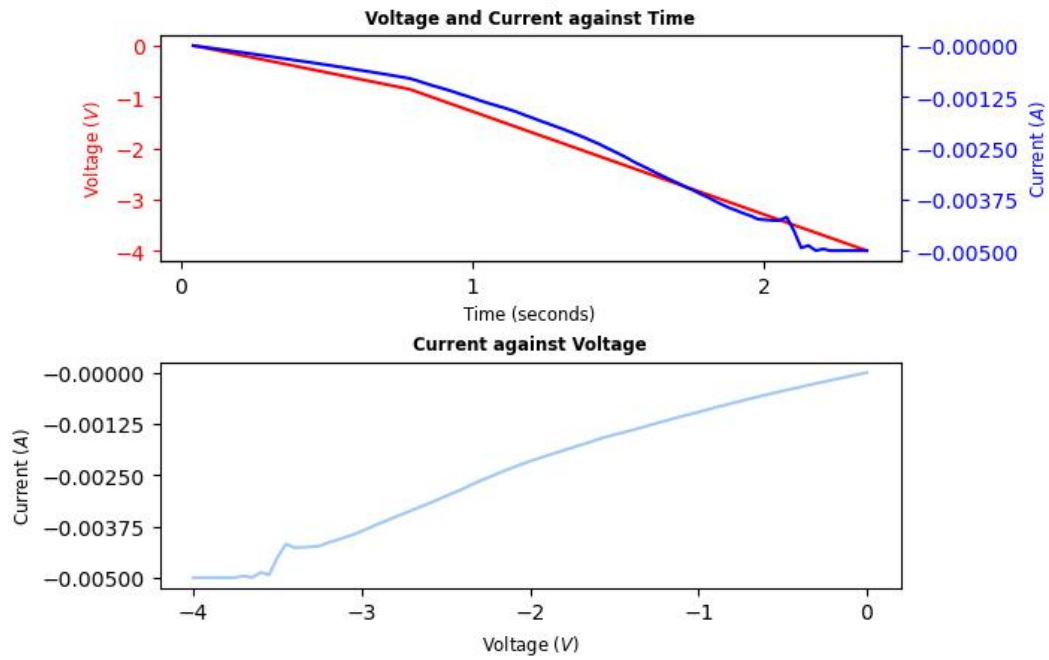

## Probe B plots

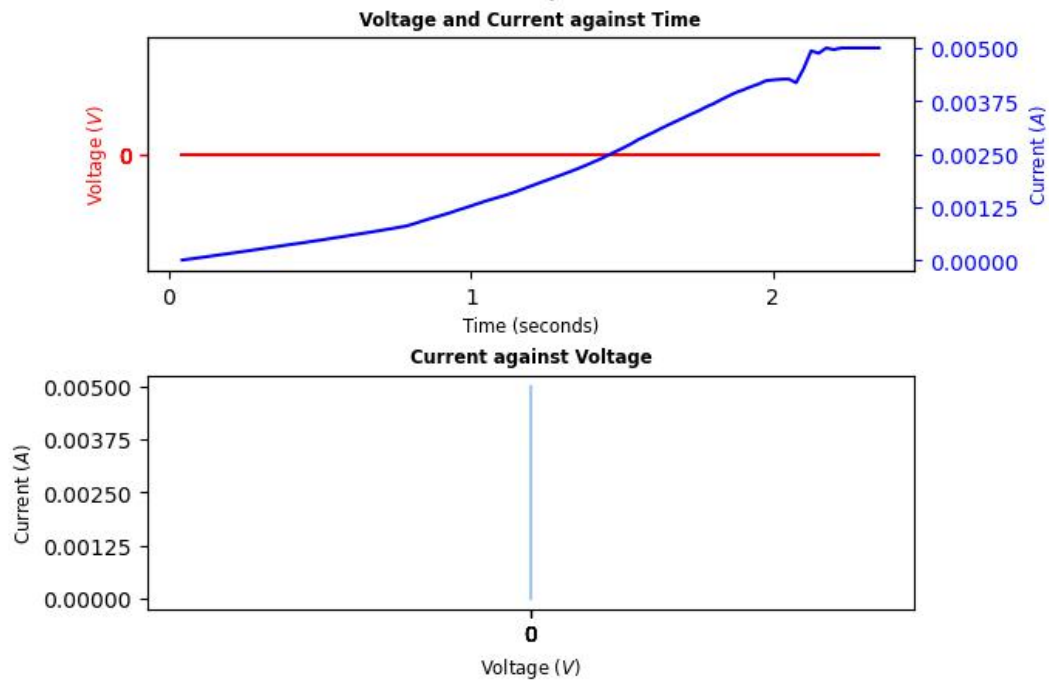

-----  
Stimulated at 02:31:59PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s


Compliance Current = 8.0mA

Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Failed reset

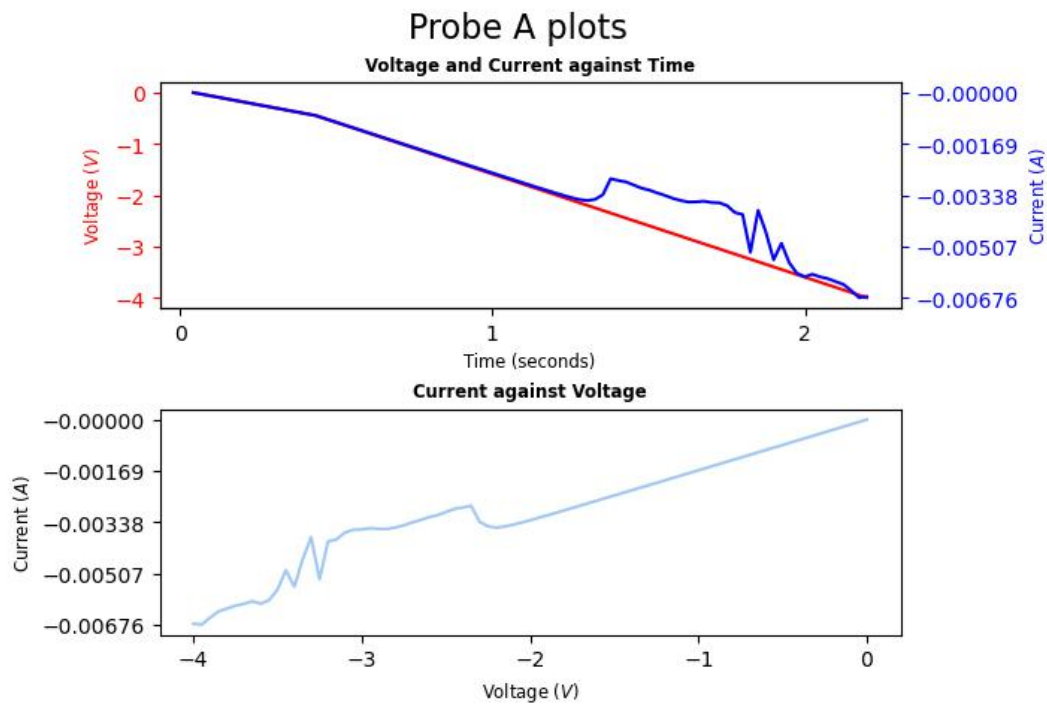



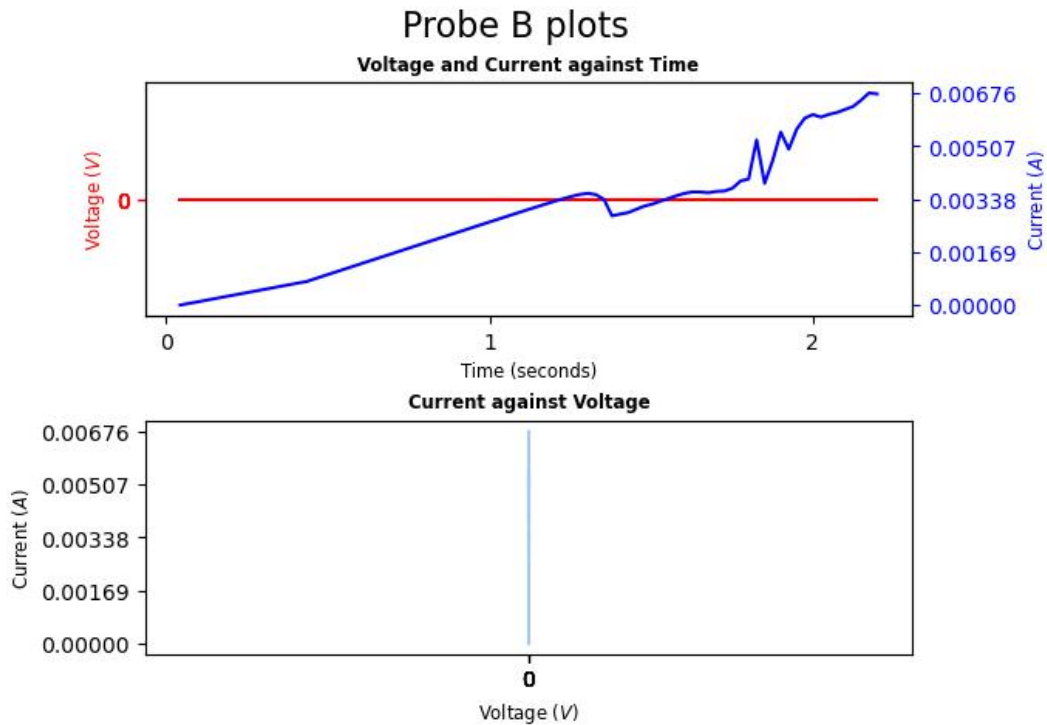

-----  
 Stimulated at 02:32:26PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 8.0mA



Platinum Voltage =

Copper Voltage =



Run Folder Name = <2 probe, so invalid>

Comments = Failed reset. Suspect cell burned out so moved on to other cell.

## Probe A plots

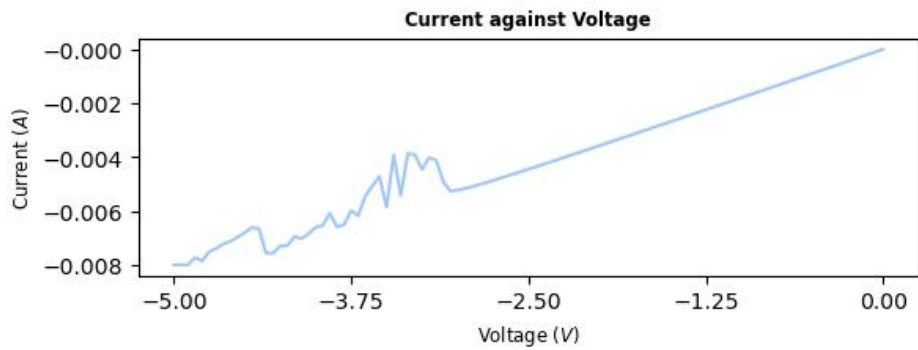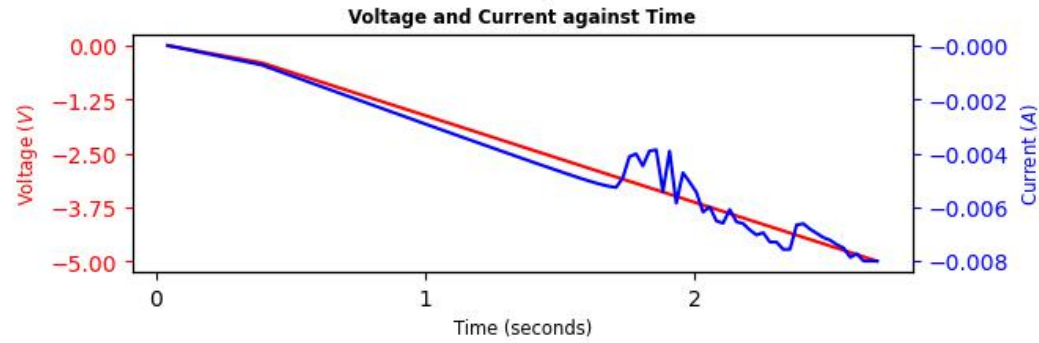

## Probe B plots

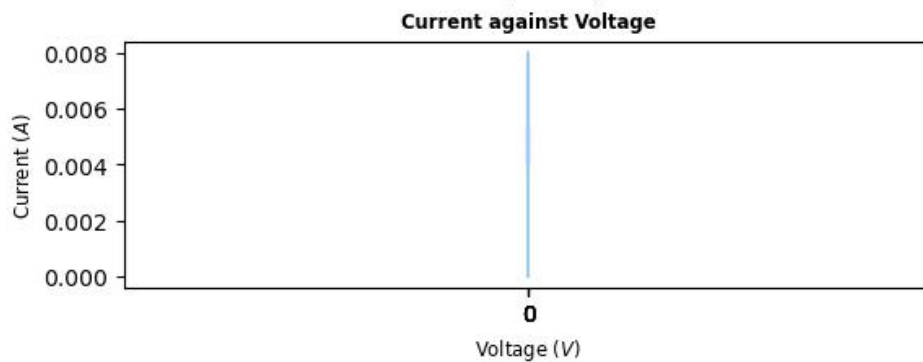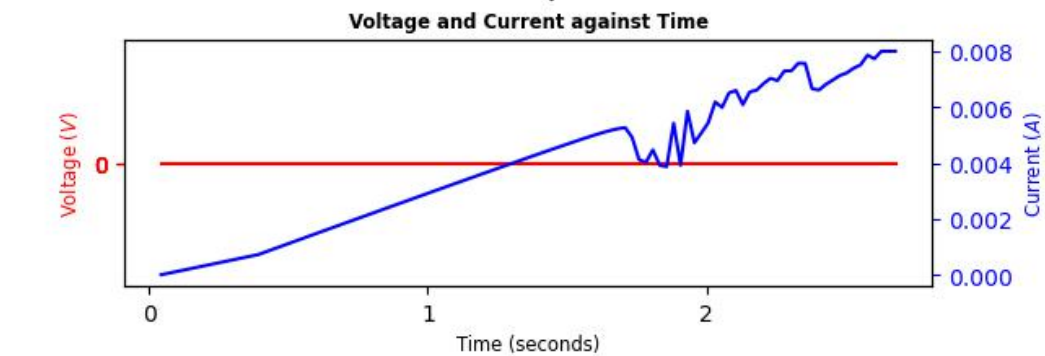

-----