

## (device,0,0,-1,-1,3,4) Plots and Summary

- Cell Size = 10um
- Number of Times Accessed = 8
- Last Stimulated = 2022/March/01 at 02:48:28PM

-----  
Stimulated at 02:37:34PM on 2022/March/01

Activity = form

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s


Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Form at 2.8 V

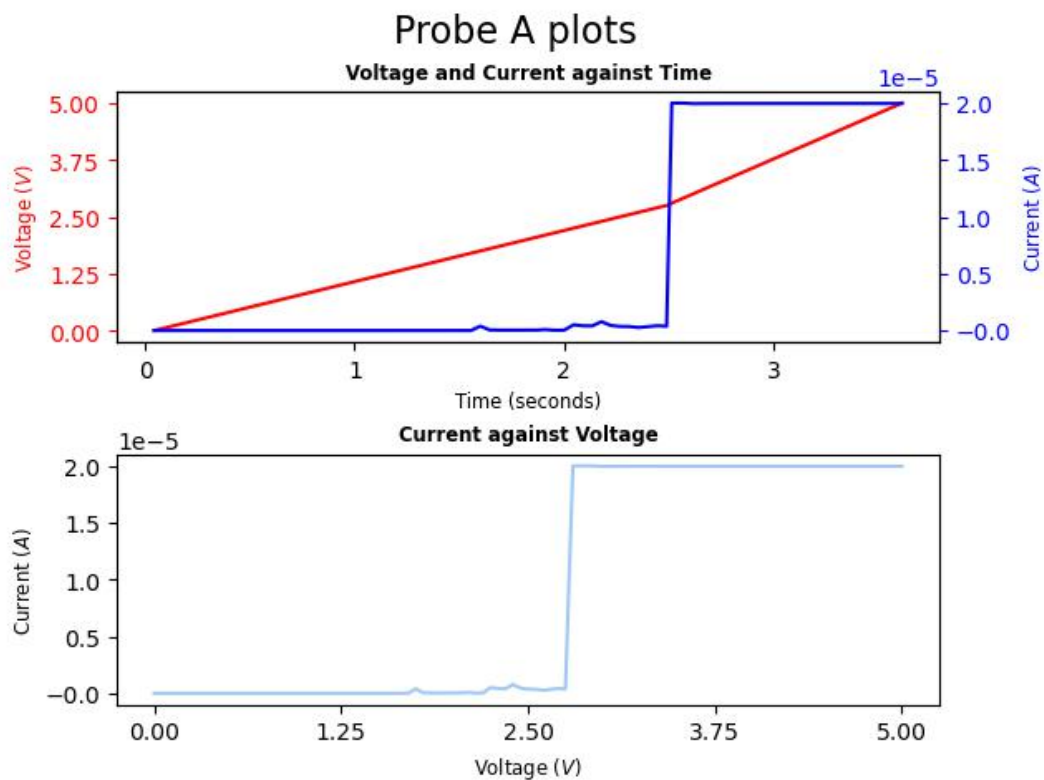

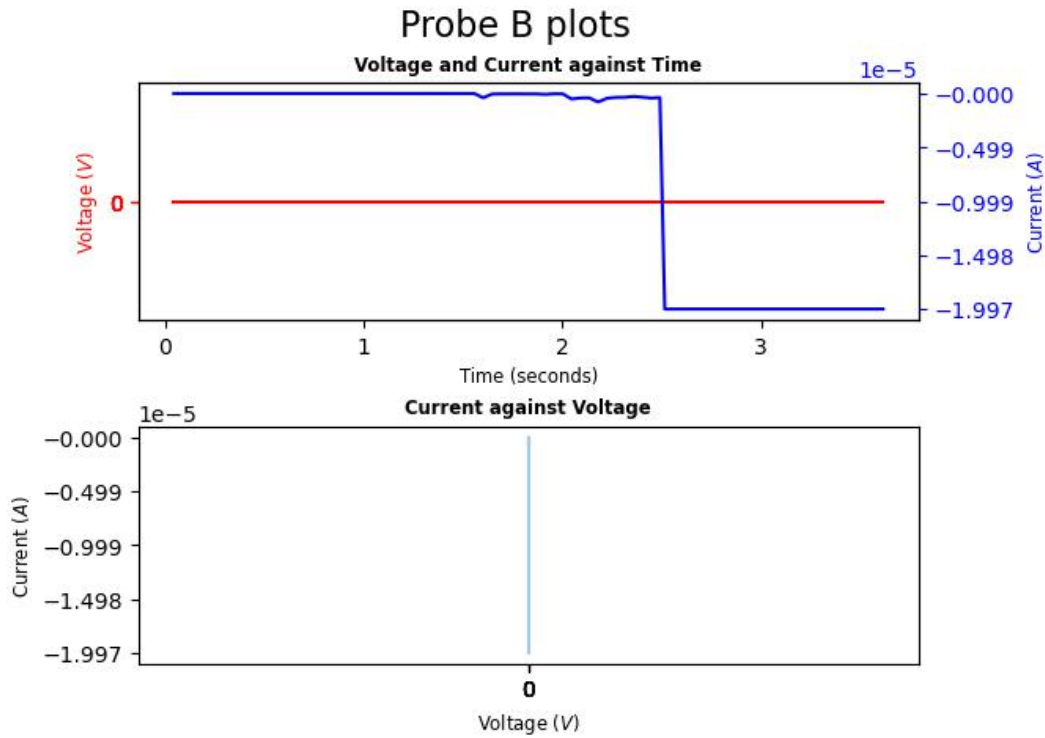

-----

Stimulated at 02:39:18PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Reset at -1.9 V or -2.75 V, hard to say. Asymptotic towards reset condition in between those two points.

## Probe A plots

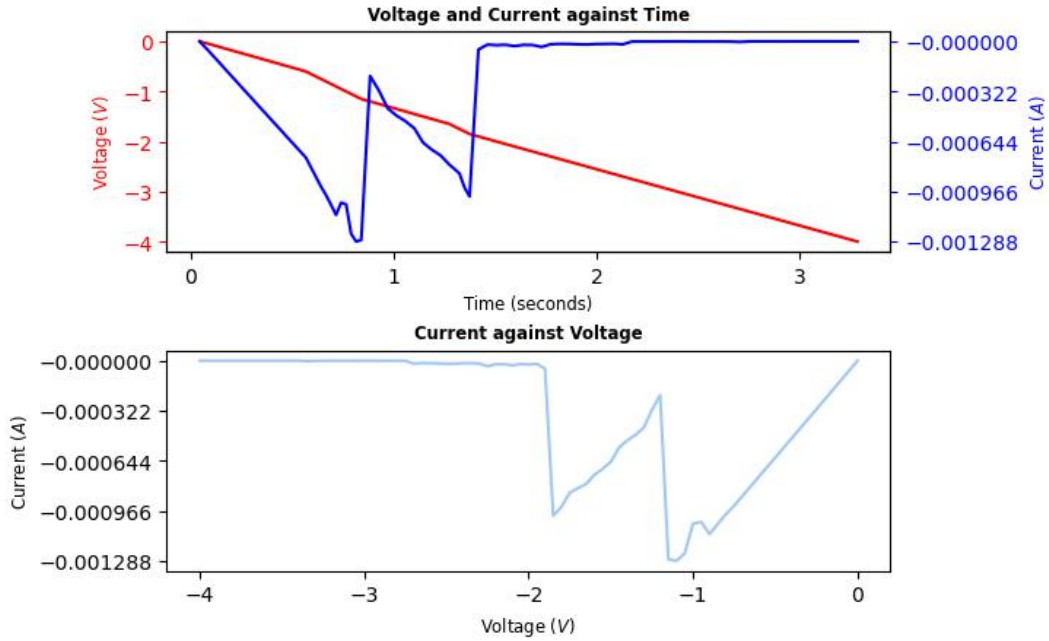

## Probe B plots

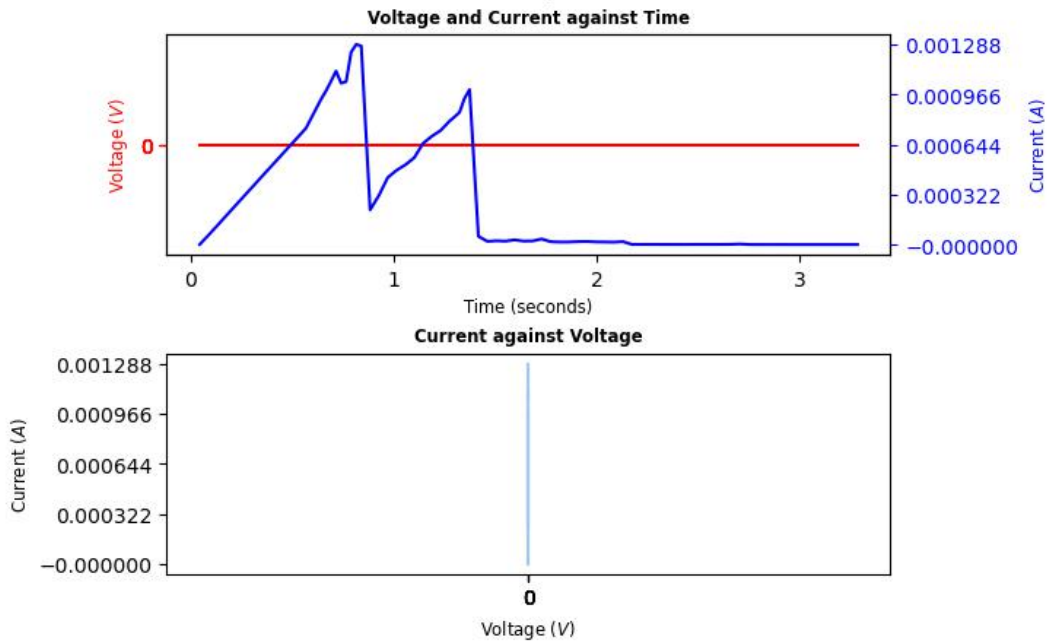

-----  
Stimulated at 02:41:03PM on 2022/March/01

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Set at 1.7 V

## Probe A plots

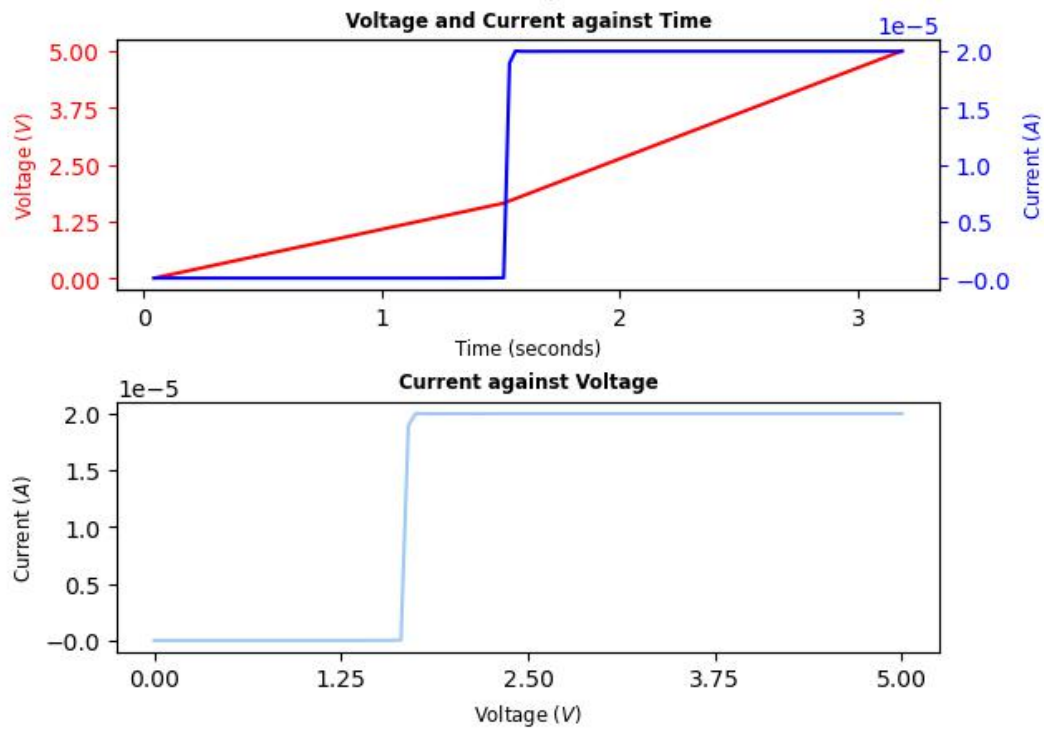

## Probe B plots

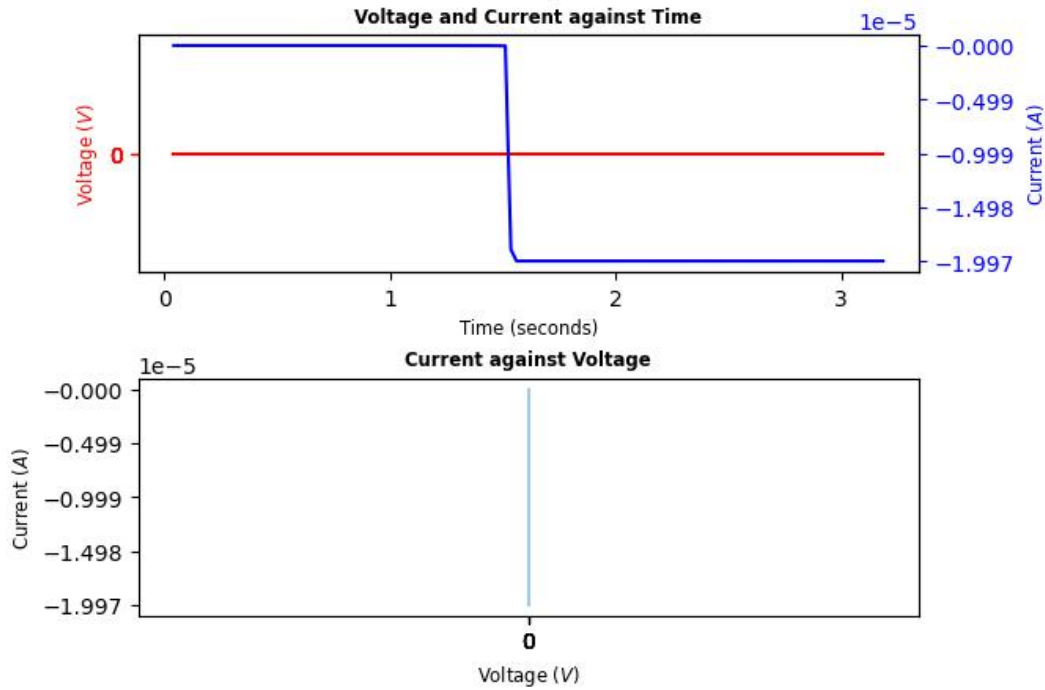

-----  
Stimulated at 02:42:07PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Reset at -0.65 V

## Probe A plots

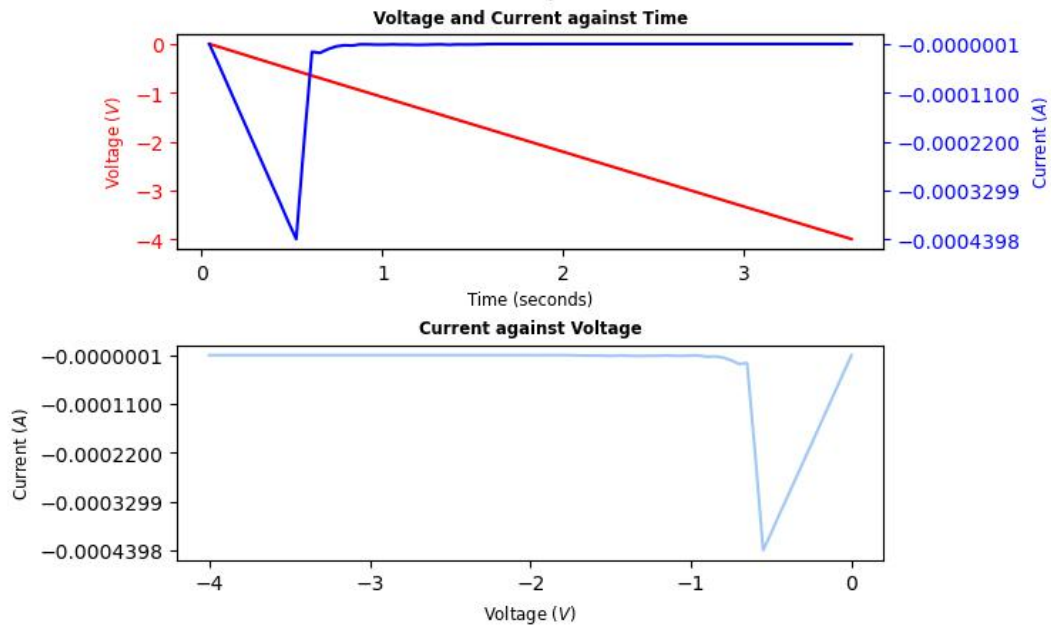

## Probe B plots

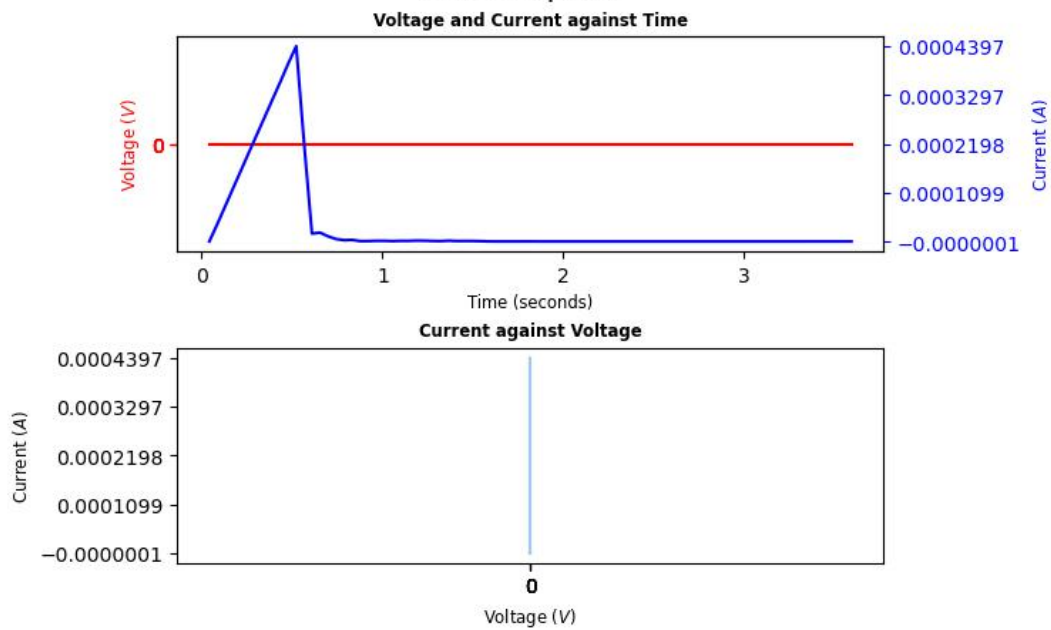

-----  
Stimulated at 02:44:46PM on 2022/March/01

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 20.0uA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Set at 2.95 V

## Probe A plots

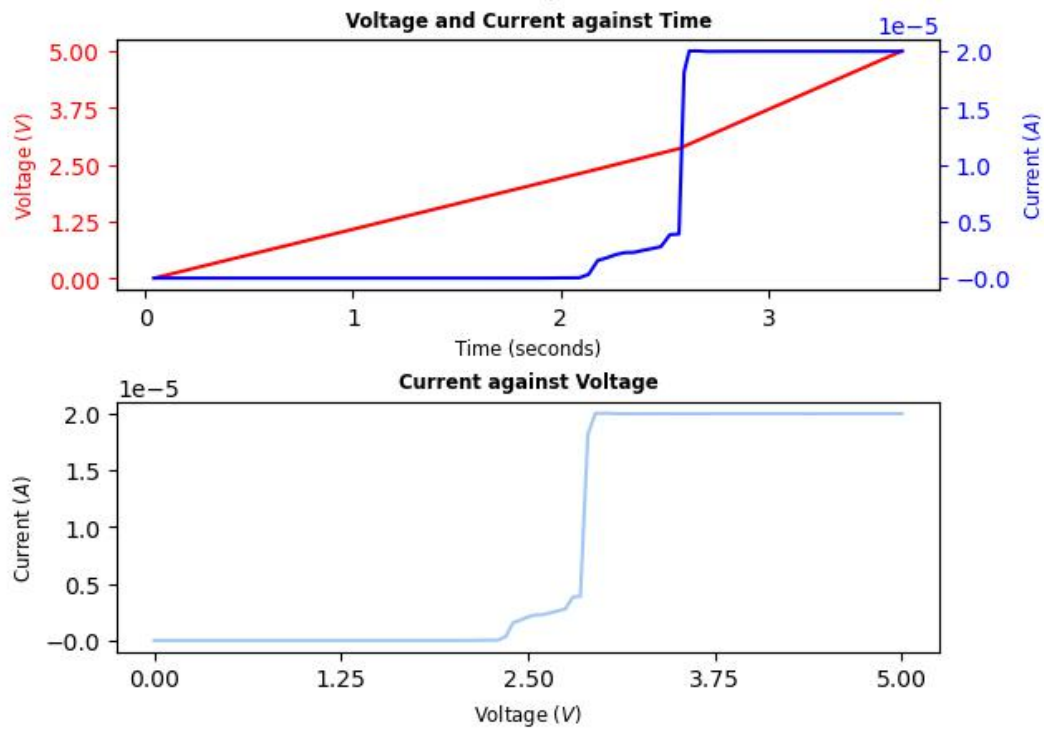

## Probe B plots

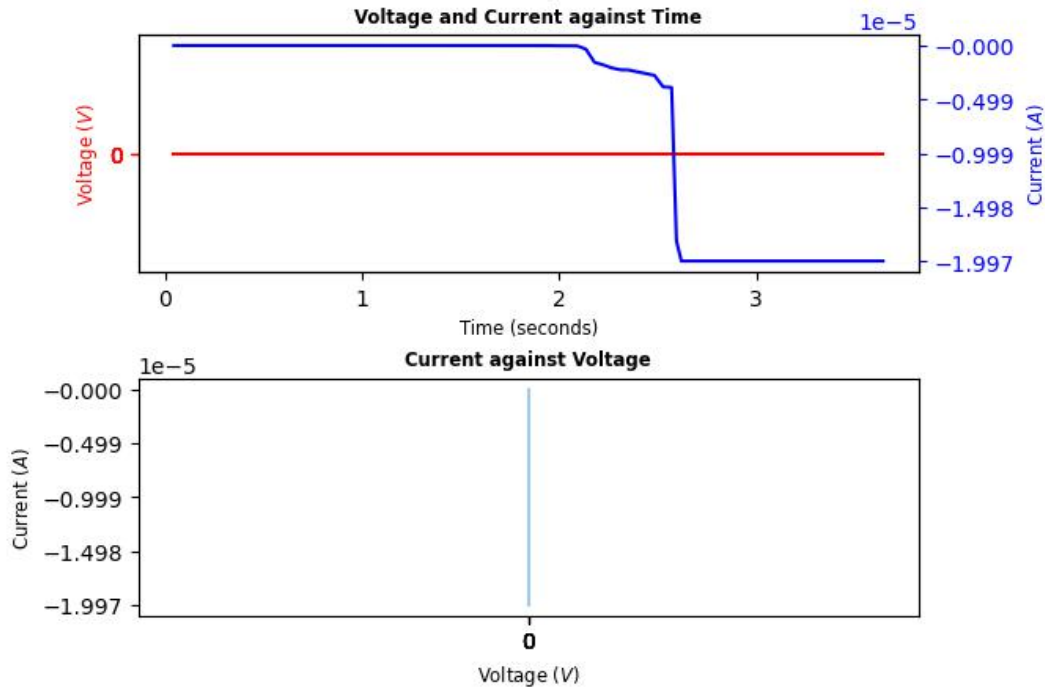

-----  
Stimulated at 02:46:39PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s

Compliance Current = 5.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Failed reset

## Probe A plots

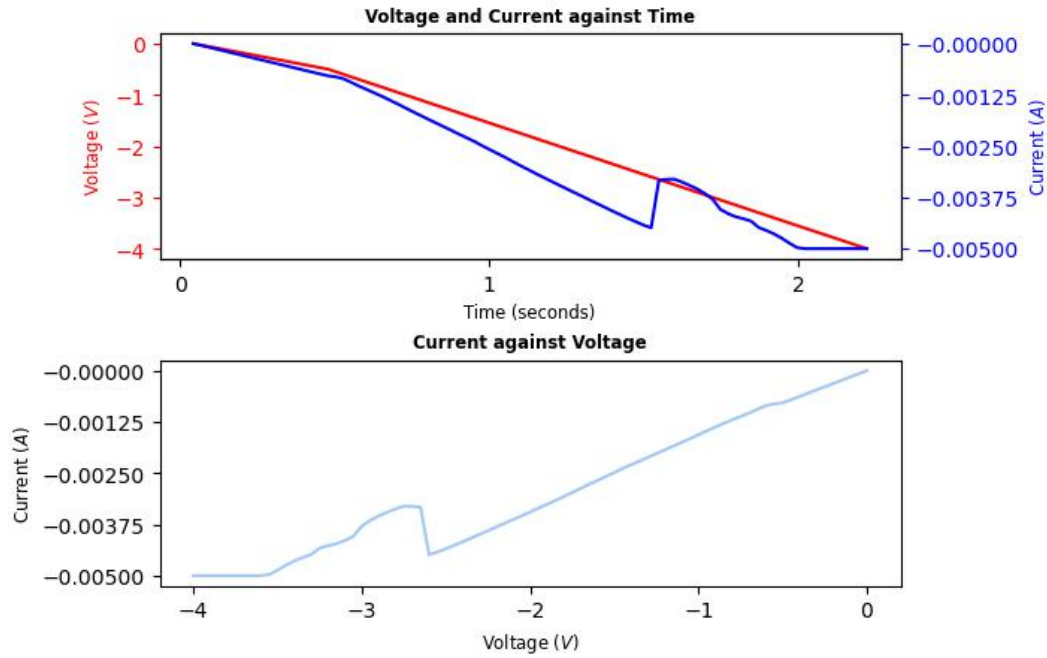

## Probe B plots

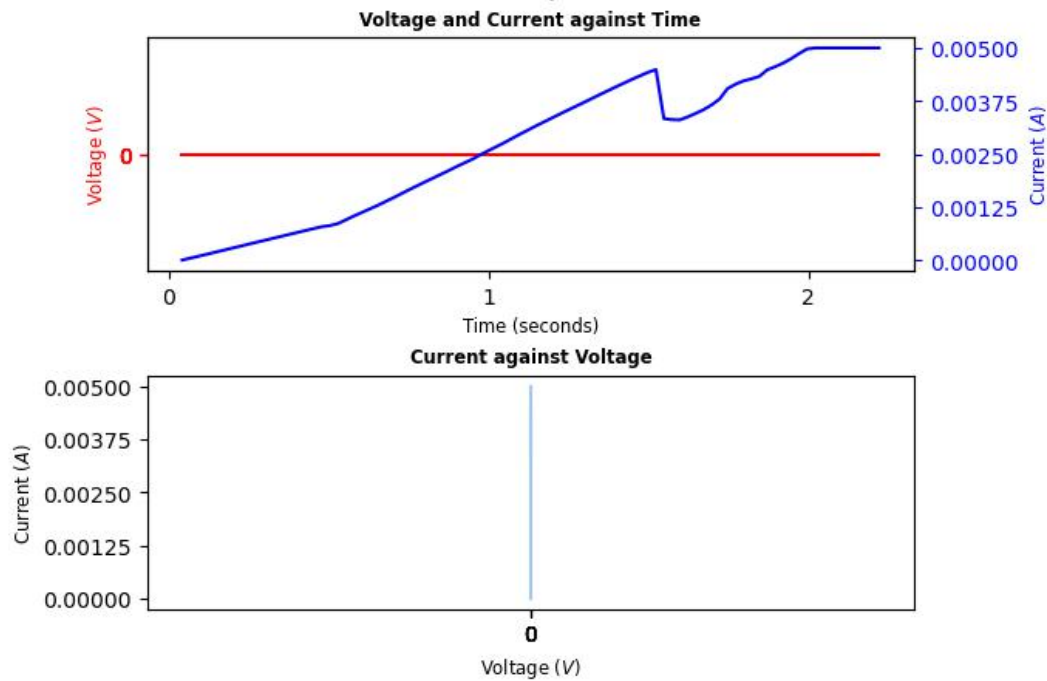

-----  
Stimulated at 02:47:45PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -5V

Ramp Rate = 1V/s


Compliance Current = 8.0mA

Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Failed reset.

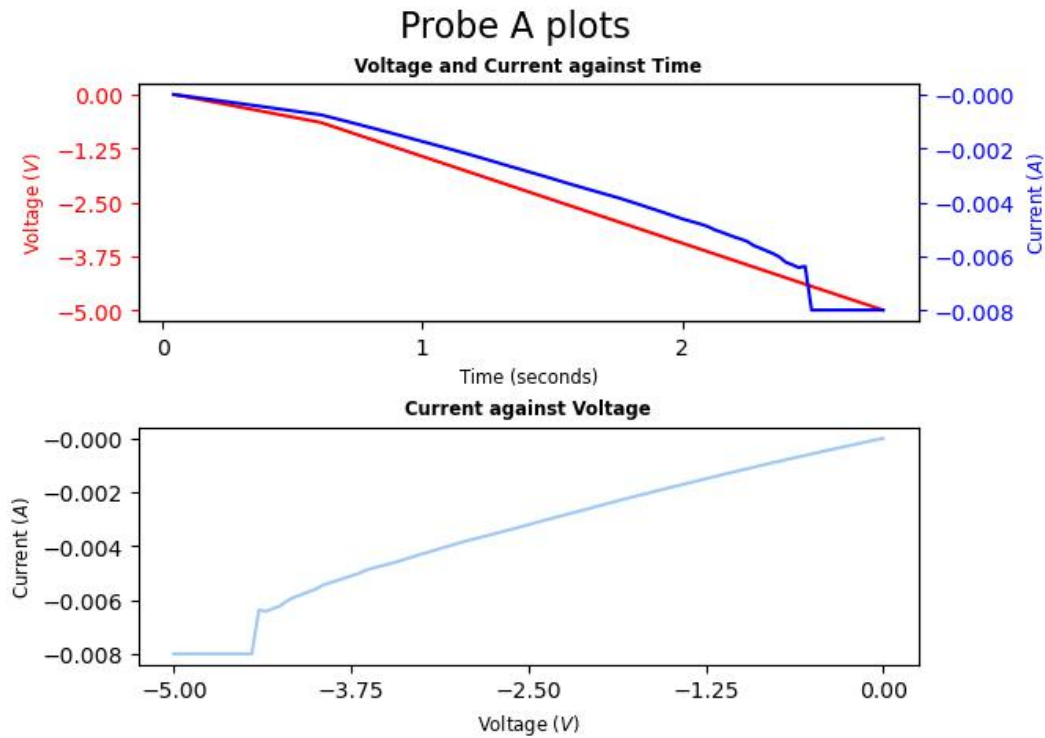

## Probe B plots

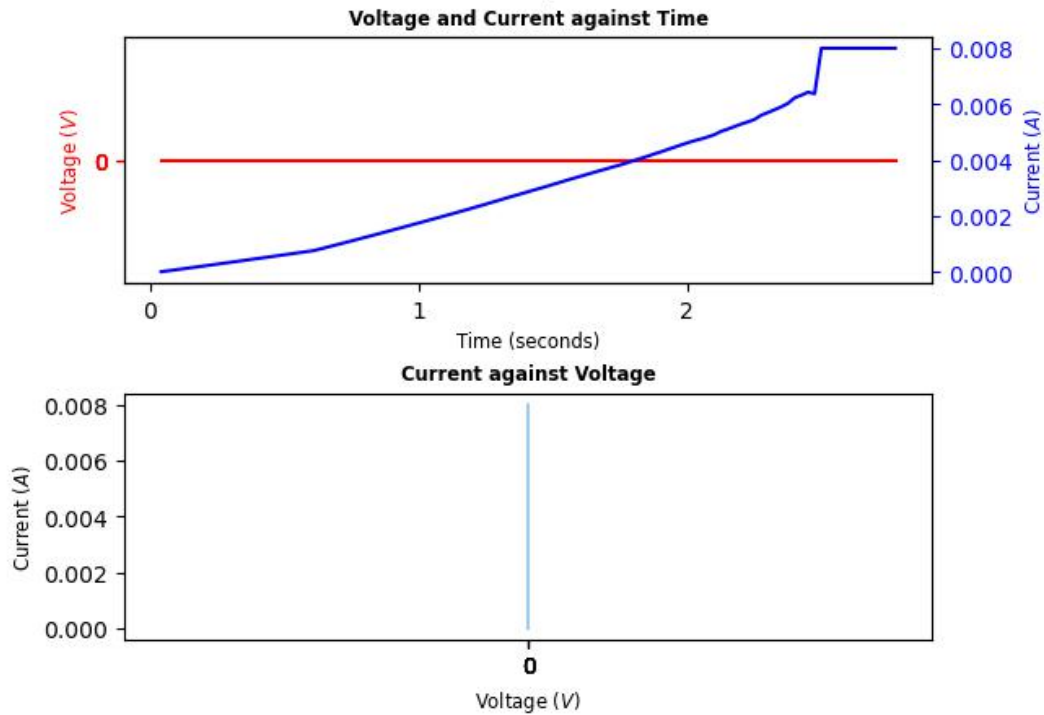

-----  
Stimulated at 02:48:28PM on 2022/March/01

Activity = reset

Start Voltage = 0V

End Voltage = -5V

Ramp Rate = 1V/s

Compliance Current = 10.0mA


Platinum Voltage =

Copper Voltage =


Run Folder Name = <2 probe, so invalid>

Comments = Reset at -4.55 V

## Probe A plots

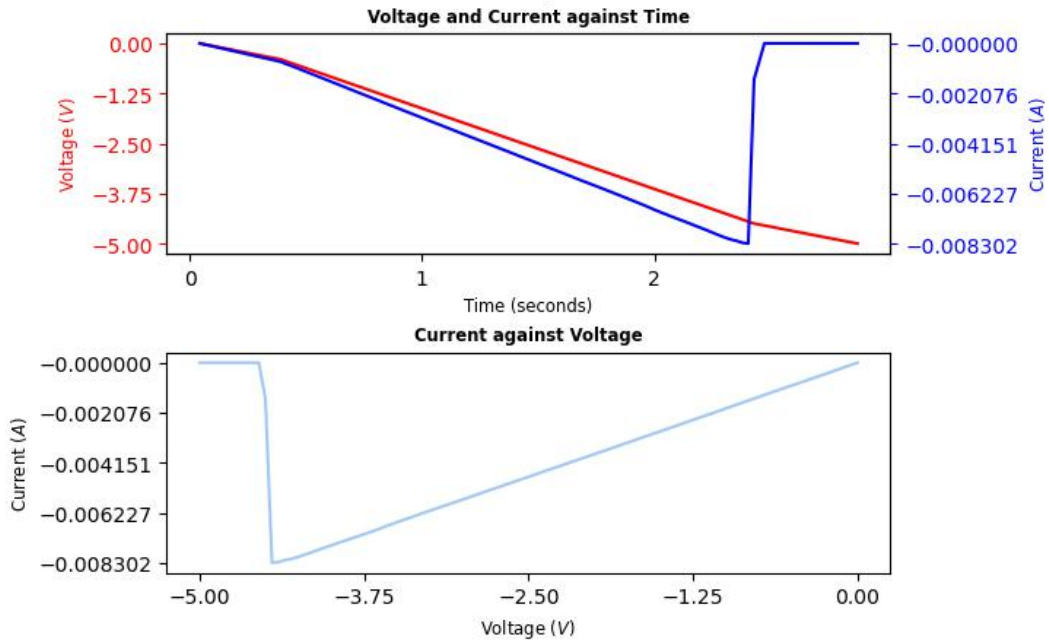

## Probe B plots

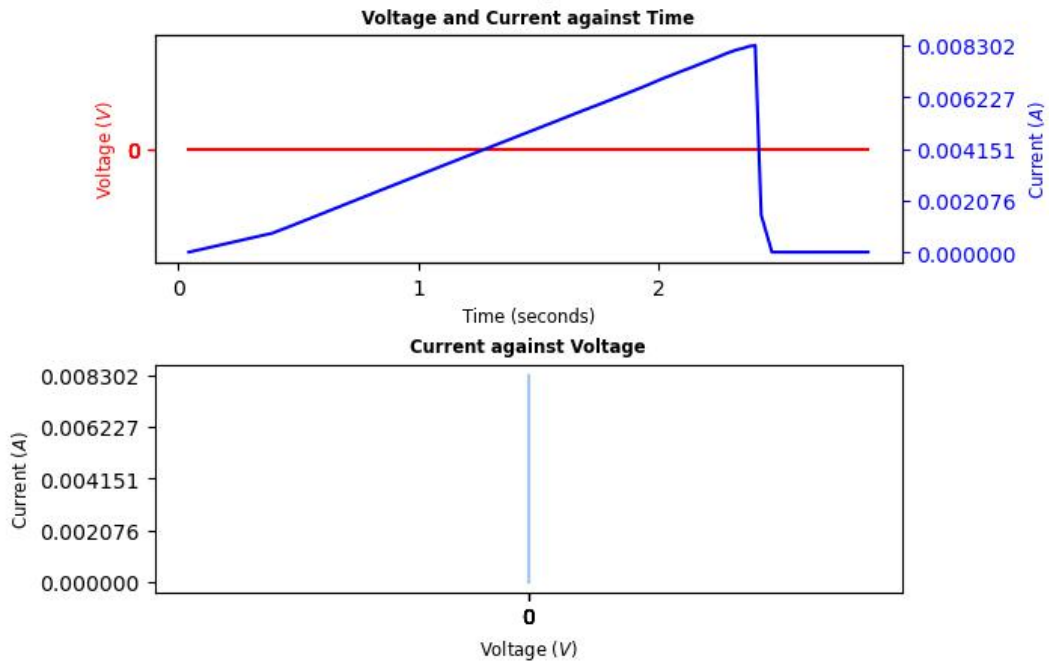

-----